




STANDARD

Thanks to its new design the unit can be used in two different configurations:

- standard: the machine is used with the trolley

- special : the head of the machine is detached from the trolley and directly applied on the edge of the plate

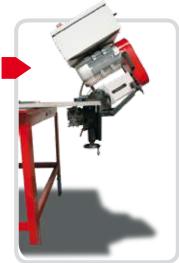

SPECIAL